

au

XPERIA Z1

SOL23

Setting Guide

Introduction

Thank you for buying the "Xperia™ Z1" (simply called the "product" from here on).

In this guide, settings and precautions for using the product are described.

- **Basic operation**  
Describes the basic operations.
  - **Initial settings**  
Make initial settings when you turn the power on for the first time.
  - **Setting au ID**  
Set up au ID.
  - **E-mail setting**  
Make initial settings for @ezweb.ne.jp etc.
  - **Making a call**  
Describes how to make a call.
  - **Receiving a call**  
Describes how to receive a call.
- **Importing contacts**  
Import contacts from microSD memory card etc.
  - **Exporting contacts**  
Export contacts to microSD memory card etc.
  - **Sending or receiving contacts via infrared communication**  
Send or receive contacts via infrared communication.
  - **Backing up to microSD memory card**  
Use a file management application to back up data.
  - **Saving battery power**  
Save battery power using widget.

Company names and product names referred to in this manual are trademarks or registered trademarks of respective companies.

The TM, ® marks may be omitted in this manual.

Screen illustrations shown in this manual may look different from the actual screens.

In some cases, upper or lower part of a screen may be omitted.

September 2013, 1st Edition  
Sold by: KDDI CORPORATION, OKINAWA CELLULAR TELEPHONE COMPANY  
Manufactured by: Sony Mobile Communications Inc.

Basic operation

For detailed descriptions of operations, refer to the "Instruction Manual" (Japanese) application installed on the product or "取扱説明書詳細版 (Full Instruction Manual)" (Japanese) available on the au homepage.

- Status bar**  
Current status and notification icons are displayed.
- Power key**  
Press and hold for over a second.  
**Power ON**  
Press and hold for over a second.  
**Screen Lock**  
Press while the screen displayed, then the backlight turns off and screen lock is activated (avoiding the keys or touch screen from false operations).  
**Unlocking Screen Lock**  
The unlock screen appears when turning the power on or the backlight on by pressing .  
Swipe (flick) the screen up or down to unlock the screen lock.
- Application key**  
Tap to display the applications screen.
- Recently used applications**  
Tap to display a list of recently used applications by a thumbnail or small apps. Tap [Close all] at the top right of the screen to end all applications and delete all list items in the thumbnail.
- Home key**  
Tap to display the Home screen.
- Back key**  
Tap to return to the previous screen.
- Display (Touch panel)**  
Operate directly touching with your finger.

Opening Notification panel

If any notification icons are displayed on the left side of the status bar, slide down the status bar to open the Notification panel. You can check details of notification icons or start corresponding applications.

Open the Notification panel to enable/disable functions with the Quick settings tool.

**Quick settings tool**  
**Notification panel**

Touch panel operations

**Tap/Double-tap**  
Tap: Gently touch a screen and then immediately release your finger. Double tap: Tap the same position twice.

**Slide**  
While your finger is gently touching the screen, trace it to the desired direction to move over.

**Pinch**  
Touch the screen with two fingers and widen (pinch-out) or narrow (pinch-in) the fingers' distance.

**Long-touch**  
Keep touching an item with your finger.

**Flick (swipe)**  
Operate the screen by quickly moving (flicking) your finger up, down, right, or left.

**Drag**  
Keep touching an item or icon, trace it to the desired direction to move.

Displaying menu

There are two types for displaying the screen menu; tapping " " and long-touching an input field or item.

Character entry

Use software keyboard to enter characters.

The software keyboard appears when you tap the entry field for registering a contact, composing a mail, etc.

**Software keyboard**  
To input Japanese, use "Xperia™ Japanese keyboard" switching five input types of "Phonepad", "QWERTY keyboard", "Japanese syllabary", "Kana handwriting", "Kanji handwriting".

- Tap " " to switch the character mode "Hiragana/Kanji" → "Alphanumeric" (except Kanji handwriting input).
- Long-touch or Flick up " " (tap " " for Kanji handwriting input) to switch software keyboard or check/change Xperia™ Japanese keyboard settings.

《Phonepad》  
《QWERTY keyboard》  
《Japanese syllabary keyboard》  
《Kana handwriting》\*1  
《Kanji handwriting》\*2

\*1 You can enter the next character over the entered character.  
\*2 You can enter kanji and katakana without switching input mode.

**Flick input**  
Touch a key in the phonepad to display input candidates for flick input as follows. Flick in the direction of a desired character to enter.

Initial settings

When you turn on the product for the first time, swipe (flick) the screen up or down to unlock screen lock and follow the onscreen instructions to set the language, functions, services, etc.

STEP START: Setting language  
Select "English (United States)" and tap "Done".  
● Alternatively, after the initial setting is complete, from the Home screen, tap [ ] → [設定 (Settings)] → [言語と入力 (Language & input)] → [地域/言語 (Language)] to set the language.

STEP 1: Starting basic settings  
When "Welcome" appears, tap "→".

STEP 2: Setting Wi-Fi® connection  
Use home wireless LAN (Wi-Fi®) or public wireless LAN to connect Internet service.  
Wi-Fi® setting method as follows. Operate in a place where signal of Wi-Fi® network can be received.  
Tap "Search for networks" to detect available Wi-Fi® networks and display the list.  
● Wi-Fi® network with is open network.  
● Wi-Fi® network with is protected by security. To connect, enter password (security key).  
● To detect Wi-Fi® network manually or make Wi-Fi® advanced settings, after the initial setting is complete, tap [ ] → [Settings] → [Wi-Fi] → [ ] → [Scan]/[Advanced].

Using auto-setting (WPS)  
WPS is a function enabling simple wireless LAN (Wi-Fi®) connection for advanced security settings. You can use the WPS function of the product to connect to the Wi-Fi® network through a WPS compatible wireless LAN (Wi-Fi®) device as an access point. Make the WPS compatible device settings as required.  
Tap [ ] → [Automatic setup (WPS)] and follow the onscreen instructions.

Using Wi-Fi® network selection settings

Select from detected Wi-Fi® network to set.

To select a protected Wi-Fi® network, you need to enter a security key.

1 Select Wi-Fi® network  
2 Input a password (security key) → [Connect]  
3 Connect Wi-Fi® network → [Done] → [→]

Setting Wi-Fi® network manually

Add Wi-Fi® network manually.  
Check network SSID, authentication type, etc. in advance.  
If security is set, you need to enter a security key.

1 [Other network...]  
2 Set network SSID and security → [Save]  
3 Connect Wi-Fi® network → [Done] → [→]

STEP 3: Setting Sony Entertainment Network

Sony Entertainment Network provides you with online services such as online music store "Music Unlimited" or online video store "Video Unlimited", and you can use these services with a single account.

Tap "Get started" to create and save a user account when using Sony Entertainment Network.

STEP 4: Accounts & sync <Setting Google account>

If you set up a Google account, you can use Google applications such as "Gmail", "Google Play", "Hangouts" or "Google+".

And, Gmail's mail address "(user name) @gmail.com" is automatically created from the user name set with a Google account.

- To create an account, you are required to register "First" name, "Last" name and "Security question and Answer". In "Recovery email address", set a different mail address used for contact from Google in case you forget your password etc. If you have no another mail, remain as blank.

1 [Google]  
2 [New]  
3 Enter "First" name, "Last" name → [ ]  
4 Enter a user name → [ ]  
5 Enter a security password → [ ]  
6 Select a question in case you forget the password → Enter an answer → [ ]  
7 [Not now]  
8 Confirm contents → [ ] → Enter displayed texts → [ ]  
9 Confirm the back up setting → [ ]  
10 Confirm contents → [Accept]  
\* If you select "Decline", confirm contents → [Done].

\* After step 4, checking registration of username starts. If the entered user name is unavailable, an entry screen for prompting another user name appears.  
\* In step 9, "Terms & Conditions" screen may appear first. In some cases, "Terms & Conditions" screen may not appear.

● You can use the product even if you do not set up a Google account.

STEP 4: Accounts & sync

Tap "Facebook"/"Twitter"/"Exchange ActiveSync" and follow onscreen instruction to set up an account and synchronize.

Tap " " of Automatic Synchronization to activate so that you can synchronize with contacts, calendar, etc. of Gmail or online service.

- To set online service, make sure that data communication is enabled. Check that / appears on the status bar or the product is connected to a Wi-Fi® network.
- When you finish setting Accounts and Synchronization, tap "→".

STEP 5: Completion of setup

When the setup completion screen appears, tap "Finish".

- Alternatively, after the initial setting is complete, from the Home screen, tap [ ] → [Settings] → [Setup guide], you can set each function and service.

au Easy Setting

Set au convenient functions or services.

1 [Next]  
2 [Registration] → [OK] → Set au ID → Check the contents → [Next]  
3 Confirm contents → Select a service to use → [Agree, and next]  
4 Confirm contents → Select a service to use → [Agree, and next]  
5 Confirm contents → Select a service to use → [Agree, and next]  
6 [Finish]

\* For setting au ID in the step 2, see "Setting au ID".  
\* If you select service in the step 3, you can back up contacts or photos etc. to au Cloud.  
\* If you select service in the step 4, information based on the location data is displayed in the widget and receive the latest music information.  
\* If you select service in the step 5, you can set support service in case of loss, theft or malfunction of the product. If you select "3LM", activate device administrator on next screen.

- Alternatively, after the initial setting is complete, from the Home screen, tap [ ] → [au Easy Setting], you can set au service.

Setting au ID

By setting au ID, you can use various services provided by au such as auスマートパス (au Smart Pass) or "au Kantan Kessai", which allows you to purchase applications from Google Play.

- au ID which is already used by another user cannot be set.

1 From the Home screen, [ ]  
2 [au ID Setting] → Check the contents → [OK]  
3 [au IDの設定・保存 (Set/save au ID)]  
4 Enter a security password → [OK]  
5 Set password → [利用規約に同意して新規登録 (Agree Terms of Use and register)]  
6 [OK] → [設定画面へ (Go to setting screen)] → Enter necessary information → Tap [入力完了 (Done)] → [設定 (Set)] → [終了 (Exit)]

\* Default value is four-digit security code written at subscription.  
\* If you already have au ID, set from [au IDをお持ちの方はこちら (Register your au ID)].




E-mail setting

To use E-mail (@ezweb.ne.jp), subscription to LTE NET is required. If you did not subscribe it when you purchased the product, contact an au shop or Customer Service Center.


This is a service with which you can send/receive mails using E-mail (@ezweb.ne.jp). Your E-mail address is determined automatically after initial setting. You can change the E-mail address later.

\* For model change from au phone, E-mail address used on the previous model can be used continuously after initial settings.


Initial settings



From the Home screen, [E-mail icon]

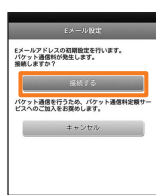


Check the contents → [接続する(Connect)]

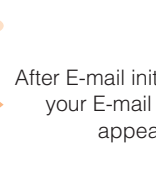


After E-mail initial settings, your E-mail address appears.


Checking E-mail address



From the Home screen, [E-mail icon]



[E-mail settings]



[E-mail information] → Check your E-mail address

Changing E-mail address



From the Home screen, [E-mail icon]



[E-mail settings]




[Other settings] → [接続する(Connect)]



[Eメールアドレスの変更 (Change E-mail address)]



Enter the security code → [送信 (Send)] → Check the contents → [承諾する (agree)]

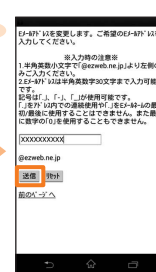

Enter E-mail address → [送信 (Send)] → [OK]

**PC-mail**

You can use mail addresses except for E-mail (@ezweb.ne.jp). You need to set up a PC-mail account to use PC-mail. For the first time use, make settings as follows.


From the Home screen, tap [Apps] → [Email] → Enter Email address and password → [Next] → [Next] → Enter account name and display name → [Next]

\*For details, refer to the "Instruction Manual" (Japanese) application installed on the product or "取扱説明書詳細版 (Full Instruction Manual)" (Japanese) available on the au homepage.


Backing up Email



From the Home screen, [E-mail icon]

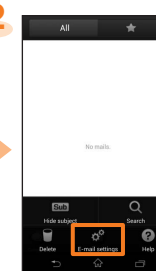


[E-mail settings]

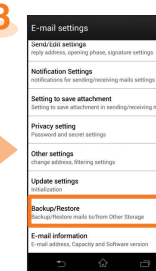

[Backup/Restore]



[Backup] → [OK]

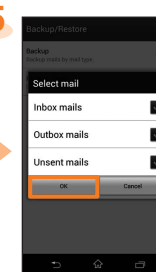

Mark to back up mails → [OK]

- Data is saved in the internal storage (/storage/emulated/0/private/au/email/BU).
- If a microSD memory card is attached, data is saved in the microSD card (/storage/removable/sdcard1/PRIVATE/au/email/BU).

Making a call

Direct input calling




From the Home screen, [Phone icon]




Enter a phone number → [Phone icon]


Calling from Contacts



Phone number input screen, [Phone icon]



Tap a party to call

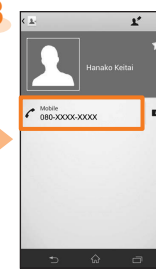

Tap a phone number

Calling from call log

Tap a phone number of the party from call log displayed on the phone number input screen.

Calling overseas from au phones (au International Call Service)


You can make international calls without any special procedure from the product.

On the phone number input screen → Enter an access code, country code, area code\*, and the phone number of the other party → [Phone icon]


\* If the area code starts with "0", dial it without including the "0". (There are some exceptions such as fixed-line phones in Italy or Moscow).

Receiving a call


Receiving a call

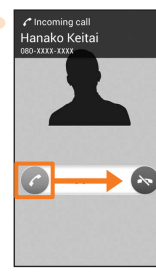

On the receiving screen, drag [Phone icon] right

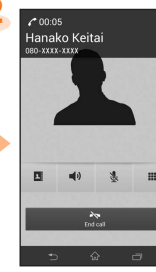

Start a call

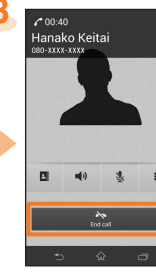

To end the call, [End call]

Rejecting a call

When you reject receiving calls, the caller hears a guidance of no response, etc.



On the receiving screen, drag [Phone icon] left

\* The call is rejected, then caller hears the guidance.

Importing contacts


Transfer (import) contacts data from your previous au phone to this product using microSD memory card, au Micro IC Card (LTE), etc.

- When an external storage is connected, you can import from "USB storage".

\* Save contacts data to a microSD card or au Micro IC Card (LTE) in advance.




From the Home screen, [Contacts icon]

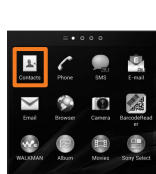


[Contacts]




[Import]



Select data location

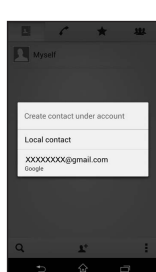

[Local contact]/Synchronized account

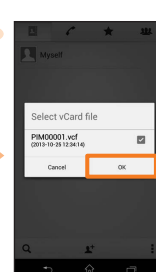

Select a vCard file → [OK]

\* Depending on the data location, you may need to select contacts to import.


\* If you do not set any accounts, contacts will be saved to "Local contact".

\* Contacts are imported.


Exporting contacts

Save (export) contacts etc. regularly to microSD memory card etc. to secure your data.


- When an external storage is connected, you can export to "USB storage".




From the Home screen, [Contacts icon]

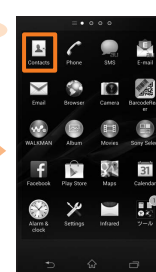


[Contacts]

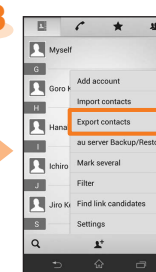

[Export contacts]

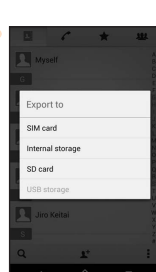

Select a location to export

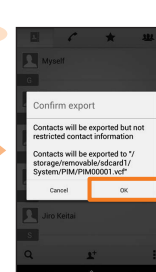


Confirm contents → [OK]

\* If you select "SIM card", select contacts and tap "Export" and then follow the onscreen instructions.


- In the step 4, if you select "Internal storage", data is saved in "/storage/emulated/0/System/PIM/", if you select "SD card", data is saved in "/storage/removable/sdcard1/System/PIM/".

Sending or receiving contacts via infrared communication


You can send/receive contacts etc. to another phone that has infrared communication function.




From the Home screen, [Contacts icon]

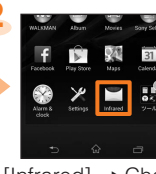


[Infrared] → Check the contents → [OK]




[Send]/[Receive]/[Receive several]

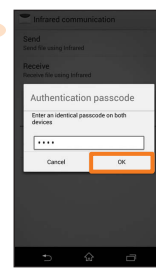

When you select "Receive several", enter Authentication passcode (4 digit number agreed with other party) → [OK]



Point infrared ports towards each other

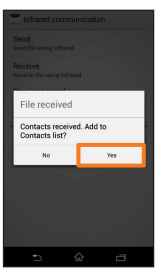


When data received, [Yes]


\* Data is saved. Depending on the data, you may need to select a saving location.

\* If you select "Receive", go to the step 5.

**Sending**

 

[Myself]/[Contact]/[All contacts]

 

[Myself]/[Contact]/[All contacts]


\* If you select "All contacts", enter Authentication passcode.

\* Point infrared ports towards each other


\* Data will be sent.

Backing up to microSD memory card


Use the "File Commander" application to back up data saved in the product to a microSD memory card.

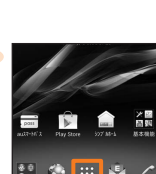


From the Home screen, [File Commander icon]




[File Commander]

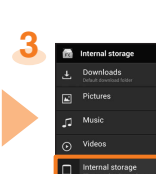


Slide the screen right → [Internal storage] → Select a folder

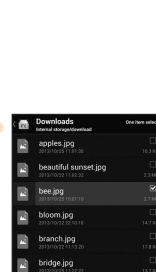

Mark files → [Select all]

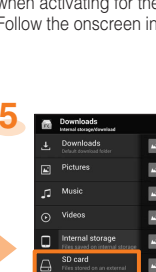

Slide the screen right → [SD card]

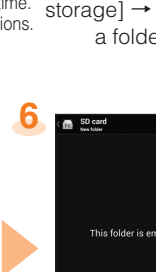

[Paste] → [Paste] on the desired location

\* A registration screen appears when activating for the first time. Follow the onscreen instructions.

\* You can create a new folder by tapping [New] → [Folder].

- When recovering backed up data, files in the microSD memory card are copied to original locations. To recover email, use an email application to restore backup.

Saving battery power

Use Quick settings widget to set Wi-Fi® function, Bluetooth® function, backlight, mobile data communication, etc. Switching the settings frequently can reduce the battery power consumption.

Adding Quick settings widget



Long-touch an area of the Home screen where no icons are displayed → [Widgets]



[Tools]



[Quick settings]

Quick settings widget

- 1

2

3

4
- 5

6

7

8
- ① Wi-Fi: Wi-Fi® On/Off

② Bluetooth: Bluetooth® On/Off

③ Backlight: Backlight brightness level adjustment

④ Data communication: Mobile data communication On/Off

⑤ Sound: Silent mode (Vibrate/Mute) On/Off

⑥ GPS: GPS On/Off

⑦ Airplane mode: Airplane mode On/Off

⑧ Roaming: Data roaming On/Off